


Monsoon

Pannier Installation Guide

OCEANWEAVE®
Reclaimed Fishnet



MONSOON PANNIER SERIES

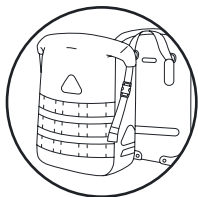


MONSOON OCEANWEAVE P45+

- Dimensions: 43 x 30 x 17.5 cm (16.9 x 11.8 x 6.9 in.) (each bag)
- Weight: 1530 g (3.37 lb.) (pair); 765 g (1.69 lb.) (each bag)
- Volume capacity: 45.2 L (pair); 22.6 L (each bag)




MONSOON OCEANWEAVE P32+

- Dimensions: 39 x 27 x 15 cm (15.4 x 10.6 x 5.9 in.) (each bag)
- Weight: 1320 g (2.91 lb.) (pair); 660 g (1.46 lb.) (each bag)
- Volume capacity: 31.6 L (pair); 15.8 L (each bag)

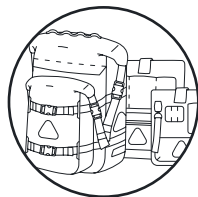


MONSOON OCEANWEAVE P23+ URBAN

- Dimensions of main compartment: 47 x 28.5 x 13.5 cm (18.5 x 11.3 x 5.3 in.)
- Dimensions of front pocket: 33 x 18 x 7.5 cm (13 x 7 x 3 in.)
- Weight: 1220 g (2.69 lb.) with padded sleeves; 995 g (2.19 lb.) without sleeves
- Volume capacity: 22.6 L

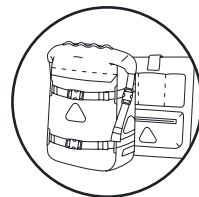

MONSOON OCEANWEAVE P18+ URBAN


- Dimensions of main compartment: 47 x 28.5 x 13.5 cm (18.5 x 11.3 x 5.3 in.)
- Dimensions: 47 x 28.5 x 13.5 cm (18.5 x 11.3 x 5.3 in.)
- Weight: 935 g (2.06 lb.) with padded sleeve; 800 g (1.76 lb.) without sleeve
- Volume capacity: 17.9 L

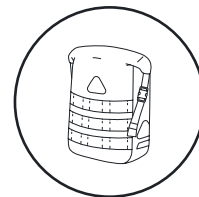


MONSOON OCEANWEAVE P16+

- Dimensions: 39 x 27 x 15 cm (15.4 x 10.6 x 5.9 in.)
- Weight: 660 g (1.46 lb.)
- Volume capacity: 15.8 L

1 Hang the bag on your rack and click into place

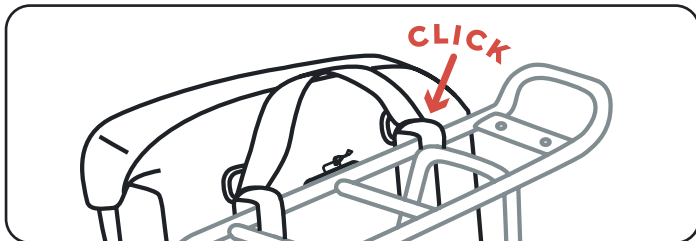

2 Turn the center lock to secure the bag.

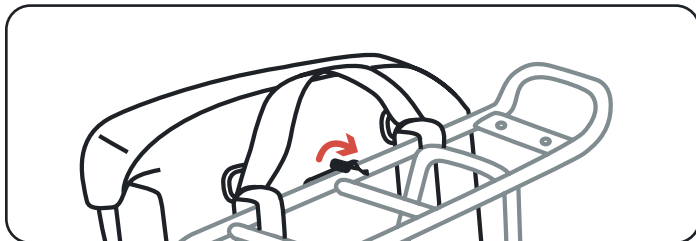


3 Make sure your pannier is firmly attached before each ride by giving the handle a wiggle.




BAG CLOSURE

For optimal closure, waterproofing and load support, roll the top of the pannier back towards the handle/rack clips. The roll should overlap a minimum of two times to ensure no opportunity for leakage or water penetration.

On the Monsoon P23+ Urban and Monsoon P18+ Urban models, this method will allow for use of the daisy chain webbing for additional attachment points and storage.

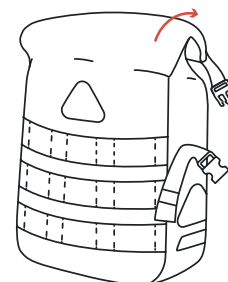


4 Adjust the lower rack hook

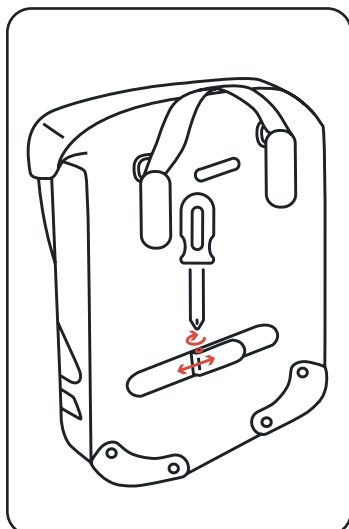

- Loosen the screw on the hook before placing your pannier on your rack
- Slide the hook to adjust its position along the vertical rack rails making sure there is enough space between the bag and pedals

5 Secure the lower rack hook

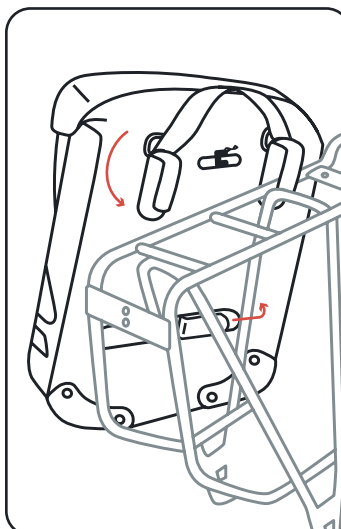

- Remove the pannier by swinging it, without moving the hook
- **IMPORTANT:** Tighten the screw back into place
- Place the pannier back on the rack and secure the top clips.
- The hook will then be in the proper place to hold tight to the vertical rack rails, preventing the pannier from swinging away from the rack.

! WARNING

Remove the pannier before transporting your bike on a car.

WARRANTY & CUSTOMER SERVICE

Our entire product line is made from reclaimed and recycled materials. We ensure our products are ethically produced by trusted partners who are like family. Quality products with a lifetime warranty because product made to last means less waste.

For any questions and concerns you may have about your Axiom products, please contact us on our website at axiomgear.com/contact