



## **STREAMLINER ROAD/ ROAD DLX / DISC DLX** **MOUNTING INSTRUCTIONS**

### ***Before you start:***

#### 1- Packaging contents:

- 1 x slotted slide arm
- 2 x long 4mm allen bolts
- 2 x short 4mm allen bolts
- 2 x10 mm nuts
- 2 x washers
- The Streamliner Road rack itself

#### 2- Tools required:

- 4mm allen key
- 5mm allen key
- 10 mm open ended wrench





## **Mounting instructions**



### **Prepare the Rack for Mounting**

3. Insert an allen bolt in each of the 2 holes at the front (upward curved end) of the top of the rack.
4. Underneath the rack, insert the slotted slide arm, the bent end facing downwards, with the allen bolts from step 1 travelling through the arm slot.
5. Place a washer on each bolt and then loosely thread a nut to the end of each bolt (2) leaving the nuts loose enough that the slotted slide arm can still be slid front to back.

### **Install the support feet at the rear of your bicycle**

6. Open the rear quick release lever, remove the nut and slide the skewer from the rear axle
7. Align the holes of the support feet with the rear axle, and starting from the left side, insert the quick release skewer through the support feet and the rear axle. Attach the quick release nut and spring and tighten the quick release to the manufacturer's specifications.



\*You should still be able to move the rack back and forth

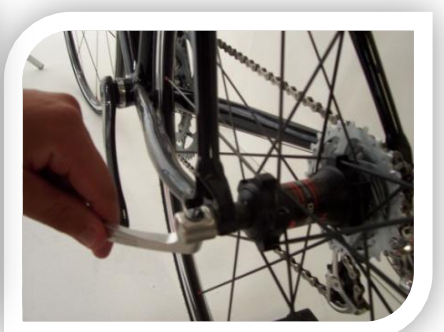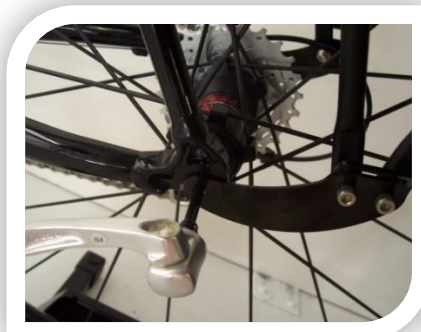



## Install the front of the rack for Streamliner Road and Road DLX (Go to next page for Streamliner Disc)

8. Using a 5mm allen key, remove the rear brake from the frame mount.
9. Remove the spacer from the brake bolt (between the brake and the frame.) Keep the spacer in case you want to remove the rack later.
10. Slide the brake bolt into the hole of the slide arm then back through the frame.
11. Tighten the brake bolt to the manufacturer's recommended torque.
12. Slide the rack along the adjustment arm until it is level or slightly angled towards the front of the bike. Ensure the platform is not tilted backward.
13. Using a 4mm allen key and a 10mm wrench tighten the two bolts located on the rack platform.
14. Tighten all bolts on the Rack and go for a ride.

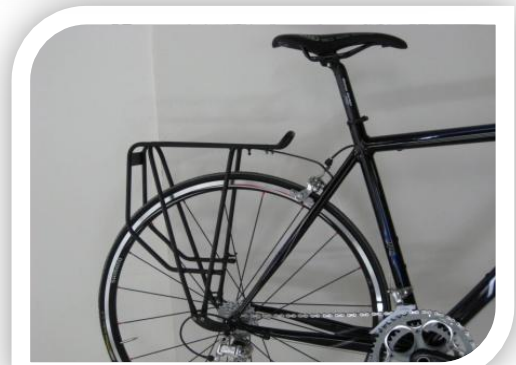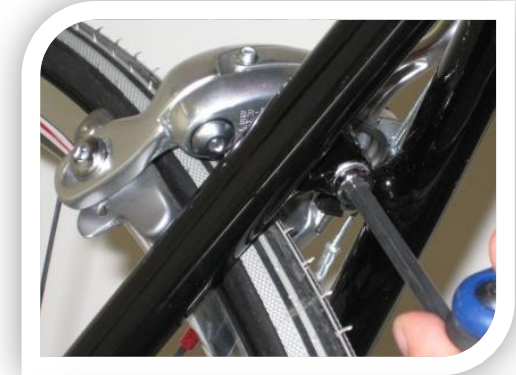



## Install the front of the rack for Streamliner Disc DLX

15. Remove the bolts located at the top of the seatstays from either side of the frame. \*If there are no bolts, use two from the 4 included allen bolts. Make sure the threads in the frame are clean for easier installation.
16. Loosen, do not completely remove, the 4 bolts at the front of the rack (Two on top and Two on the sides).
17. The Versalock arms should now be mobile.
18. Extend the Versalock arms forward to the seat stay
19. Using an allen bolt on each side, loosely attach the arms to
20. Adjust the racks platform so it is level with the ground or tilted slightly forward
21. Tighten all bolts
22. Add panniers and go for a ride!
23. The End!

