

Journey

Rack Installation Guide

INFINITEALUM[®]
Recycled Aluminum



JOURNEY SERIES

JOURNEY

- Fits wheel sizes: 26 in., 27 in., 700c



JOURNEY WITH SPRING

- Fits wheel sizes: 26 in., 27 in., 700c




JOURNEY DISC

- Fits wheel sizes: 26 in., 27 in., 700c
- Disc brake compatible



JOURNEY ADJUSTABLE 2429

- Fits wheel sizes: 24 in., 26 in., 27 in., 27.5 in., 28 in., 29 in., 700c
- Disc brake compatible

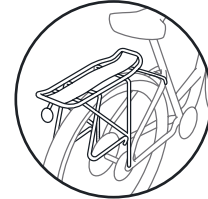


TOOLS REQUIRED

4 mm Allen wrench

5 mm Allen wrench

8 mm open wrench
or ratchet

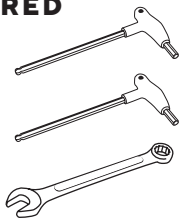

HARDWARE

- 4 x 4 mm Allen Bolts
- Extra-long Versalock™ arms for frames with eyelets

Other mounting options (sold separately):


Trekk Seat Collar

- 28.6 mm: 255120-01


- 29.8 mm: 255120-02

- 31.8 mm: 255120-03

- 34.9 mm: 255120-04

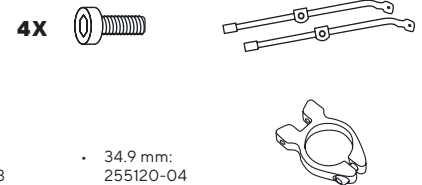


1 Mount the lower part of the rack:

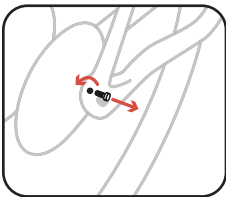


- Remove the bolts in the eyelets just above your axle on the seat stay.

If there are no bolts, ensure the eyelets are clear, and the threads are free of debris – you can do this by screwing in one of the 4 mm Allen bolts provided with your rack. The bolt should go in and out of the frame smoothly.

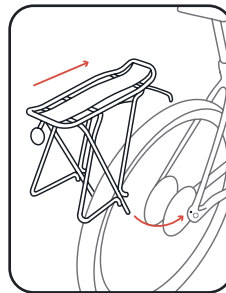

- Ensure the rack is facing forward, with the two bolts on the top of the rack closest to your seat.
- Place each of rack arms on the outside of your frame seat stays so that the holes align with the holes for the eyelets.

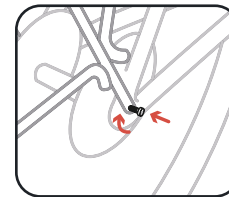


- Use two of the 4 mm bolts to secure the rack to the frame – do not tighten fully.

Journey Adjustable 2429: Use the 4 mm bolts on the inside of the rack stays to adjust the height of the rack to suit your bike's wheel clearance.

2 Mount the upper part of your rack:



2A - SEAT STAY EYELETS:

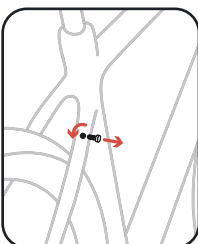

- Remove the bolts at the top of the rear seat stays from the eyelets either side of the frame.


If there are no bolts, ensure the eyelets are clear, and the threads are free of debris – you can do this by screwing in one of the 4 mm Allen bolts provided with your rack. The bolt should go in and out of the frame smoothly.

- Attach the Versalock™ arms to the holes at the front end of the rack by screwing the 5 mm bolts into the plastic bracket pieces provided, do not tighten – the arms should be able to move freely

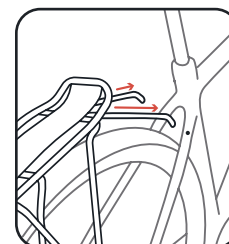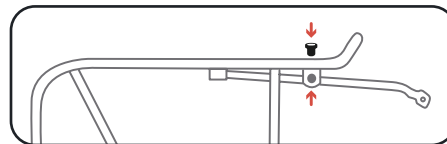


- Reach the arms forward to the seat stay eyelets. The arms may reach better with the 90° angle pointing toward the inside or outside of the frame, either way will work.


2A - SEAT STAY EYELETS CONTINUED:

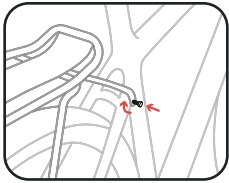

- Attach the Versalock arms to your frame using the 4 mm bolts provided with your rack, do not tighten them fully.

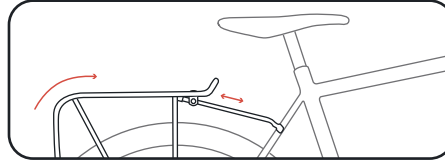

- Adjust the angle of the rack by sliding it back and forth on the Versalock arms, the rack should sit level or tilted slightly forward, ensuring the platform does not lean to the rear.

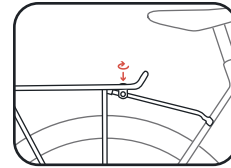

- Secure the rack's positioning by tightening the top 5 mm bolts to tighten the Versalock arms in place

**Pro Tip: For a custom fit, you can round the Versalock arms up to 30° without impacting their strength.*


2C - TREKK SEAT COLLAR EYELETS:

TREKK SEAT COLLAR REQUIRED


Sold separately to create eyelets next to the seat post on bikes without them.

AVAILABLE FOR SEAT POST SIZES:


- 28.6 MM
- 29.8 MM
- 31.8 MM
- 34.9 MM

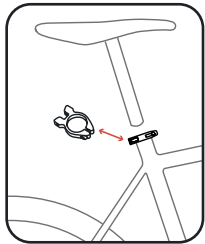


- Remove your bike's current seat collar by loosening the bolts at the base of the seat post, pull up to remove the seat.
- Replace with the new collar with the eyelets to the back and tightening bolt to the front. Insert the seat post back into the required height and tighten securely.

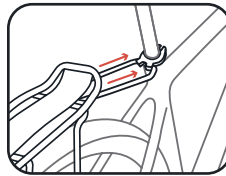

- Reach the arms forward to the seat collar eyelets. The arms may reach better with the 90° angle pointing toward the inside or outside of the frame, either way will work.


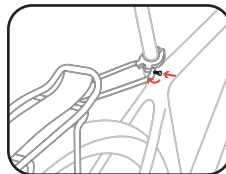


- Attach the Versalock arms to the collar using the 4 mm bolts provided with your rack, do not tighten fully.

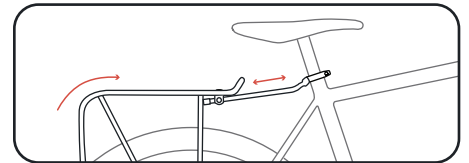

- Adjust the angle of the rack by sliding it back and forth on the Versalock arms, the rack should sit level or tilted slightly forward, ensuring the platform does not lean to the rear.

- Attach the Versalock™ arms to the holes at the front end of the rack by screwing the 5 mm bolts into the plastic bracket pieces provided, do not tighten – the arms should be able to move freely

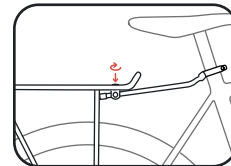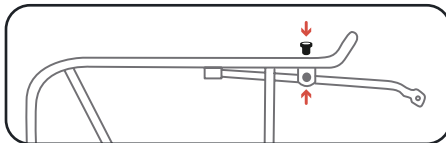

- Secure the rack's positioning by tightening the top 5 mm bolts to tighten the Versalock arms in place

3

Tighten all of your bolts and get ready to ride. Check out other products on axiomgear.com to get the gear that suits your lifestyle and go ride free!

WARNING Failure to follow installation instructions can result in loss of control, damage, personal injury or death. Axiom Cycling Gear recommends that all racks are installed by a qualified bicycle mechanic. ~

Periodically check all nuts and bolts for tightness.

WARRANTY & CUSTOMER SERVICE

Our entire product line is made from reclaimed and recycled materials. We ensure our products are ethically produced by trusted partners who are like family. Quality products with a lifetime warranty because product made to last means less waste.

For any questions and concerns you may have about your Axiom products, please contact us on our website at www.axiomgear.com/contact-us